Bouticcelli

Installations Instructions

Bathtub

The electrical installation must be carried out by a qualified electrician. All work must comply with the national and local electrical standards in force at the time of installation.

Provide an independent power supply, single-phase, grounded (110–120 V, 50–60 Hz) protected by an appropriate GFCI (Ground-Fault Circuit Interrupter) or equivalent fuse.

This protection device must be dedicated exclusively to the bathtub. It is recommended to use a residual current device (RCD) or differential circuit breaker with a sensitivity of up to 20 mA.



It is recommended to install a bathroom exhaust fan (steam evacuation device) in your bathroom. The walls and floor must be finished, tiled, and level before installing the bathtub. The skirt is removable and allows access to the components. All bathtubs are factory-tested before shipping.

Accessible shut-off valves should be installed on the water supplies to your bathtub so that the water can be shut off in the event of a prolonged absence or maintenance.

1. SITE PREPARATION

Before installation, ensure that:

- ☐ The floor is finished (ceramic or other final flooring surface).
- ☐ The floor is structurally sound and perfectly level.
- ☐ The space matches the model dimensions.

Required drain: Standard 1 1/2”

Ensure plumbing and electrical connections are positioned according to the pre-installation dimensions:

- ☐ 1 1/2” drain is properly positioned.
- ☐ 1/2” female water outlet is properly positioned.
- ☐ 110–120 V GFCI-protected electrical outlet must be properly positioned.

2. POSITIONING

- ☐ Place the bathtub in position without making any plumbing connections.
- ☐ Check the visual alignment.
- ☐ Verify that the bathtub is level using an appropriate tool.
- ☐ Adjust the feet if necessary.

> **Note:** The bathtub must be perfectly stable with no movement.

3. ELECTRICAL INSTALLATION

- ☐ Connect the power cord attached to the control box to the electrical supply.
- ☐ Check that the system is working by pressing the power button on the controller.

4. PLUMBING INSTALLATION

- ☐ Connect the 1 1/2" drain according to local plumbing codes.
- ☐ Connect the pre-installed 1/2" male flexible hose to the 1/2" female water outlet.
- ☐ Tighten firmly without over-tightening.

5. WATER TIGHTNESS TEST

- ☐ Wait 24 hours after the plumbing installation.
- ☐ Fill the bathtub completely.
- ☐ Let it sit filled with water for 15 to 20 minutes.
- ☐ Check for any leaks underneath the bathtub.
- ☐ Verify proper and complete drainage.


6. FINAL INSTALLATION

- ☐ Place the bathtub in its final position.
- ☐ Apply a silicone sealant at the base.

Faucet sets


1 Faucet set with 2 components

Mixer A allows you to adjust the water temperature by turning it left and right. The water flow is adjusted by lifting the tap handle.
Diverter B allows you to divert the water flow to the following two positions: fill spout and shower head.

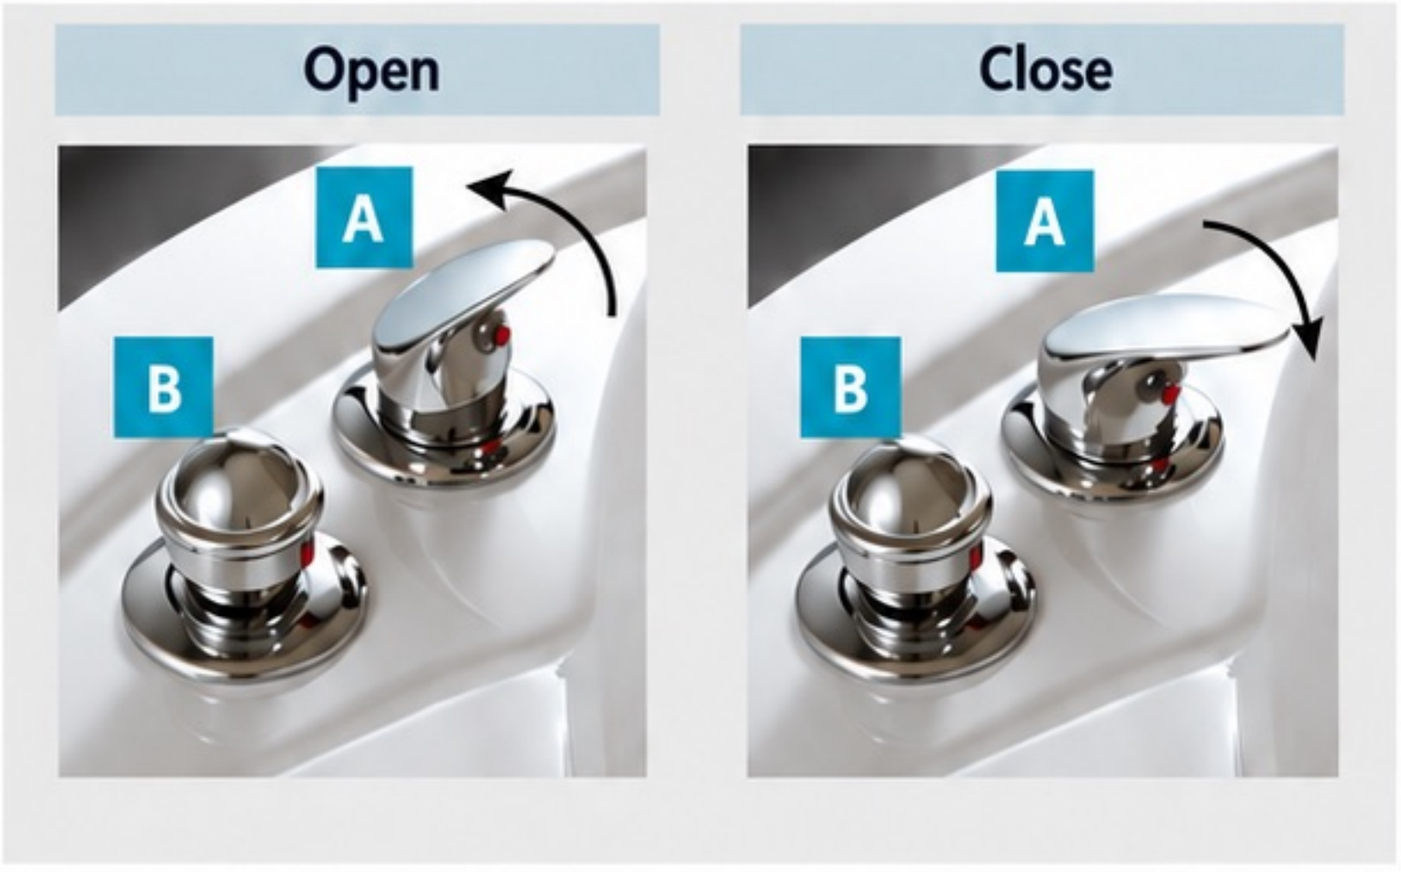


A Hot and cold water mixer

B Diverter

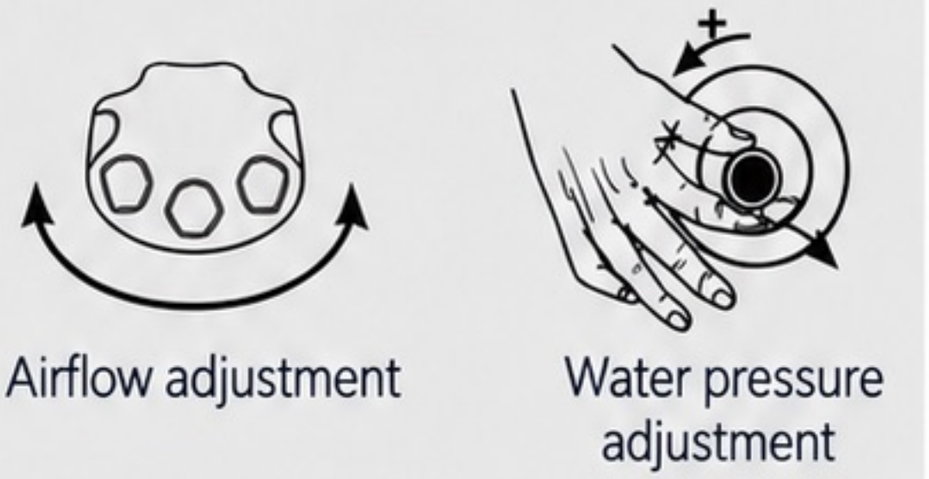

2 Faucet set with 3 components

Mixer A controls the hot water flow.
Mixer C controls the cold water flow.
Diverter B directs the water flow to the following three positions: fill spout, shower head, and rinse function.

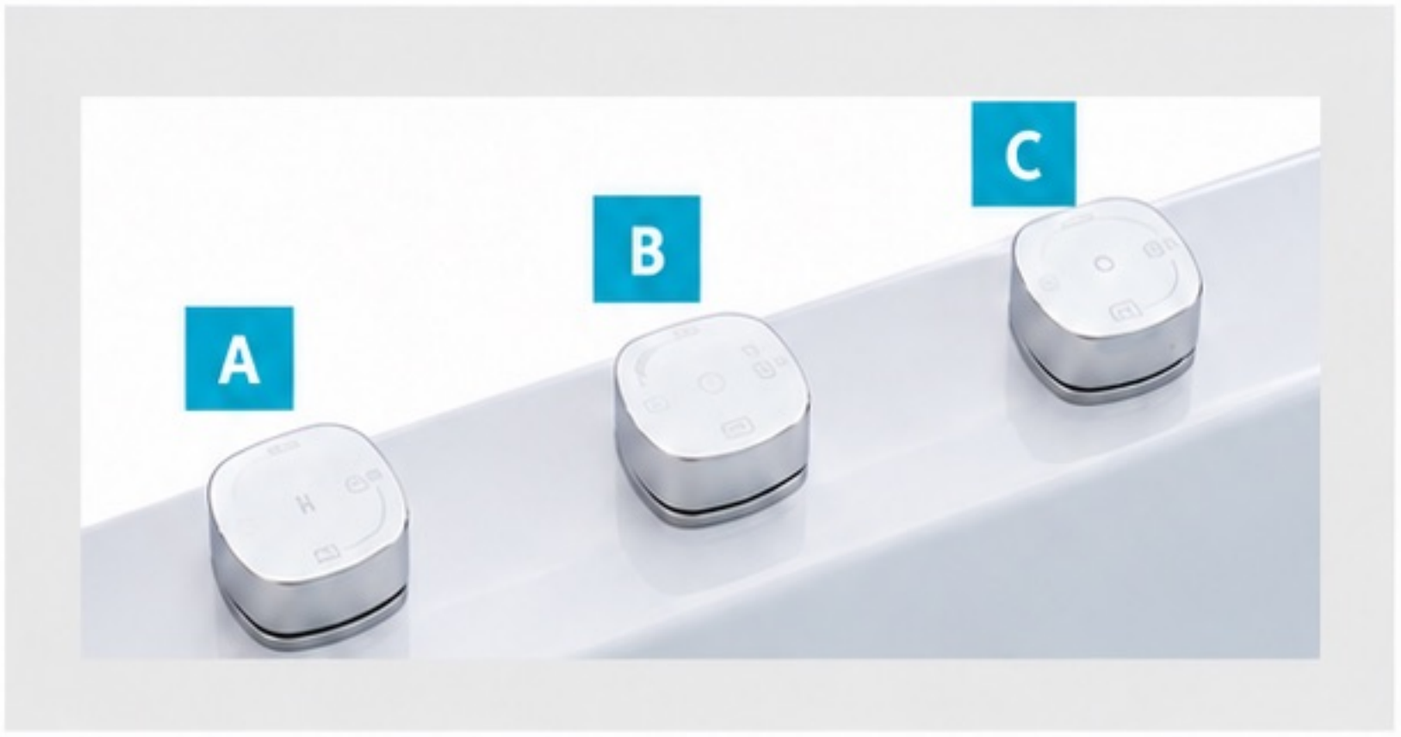

A Hot water mixer

B Diverter


C Cold water mixer

Controller Instructions



DXD-A027/A

Controller Instructions

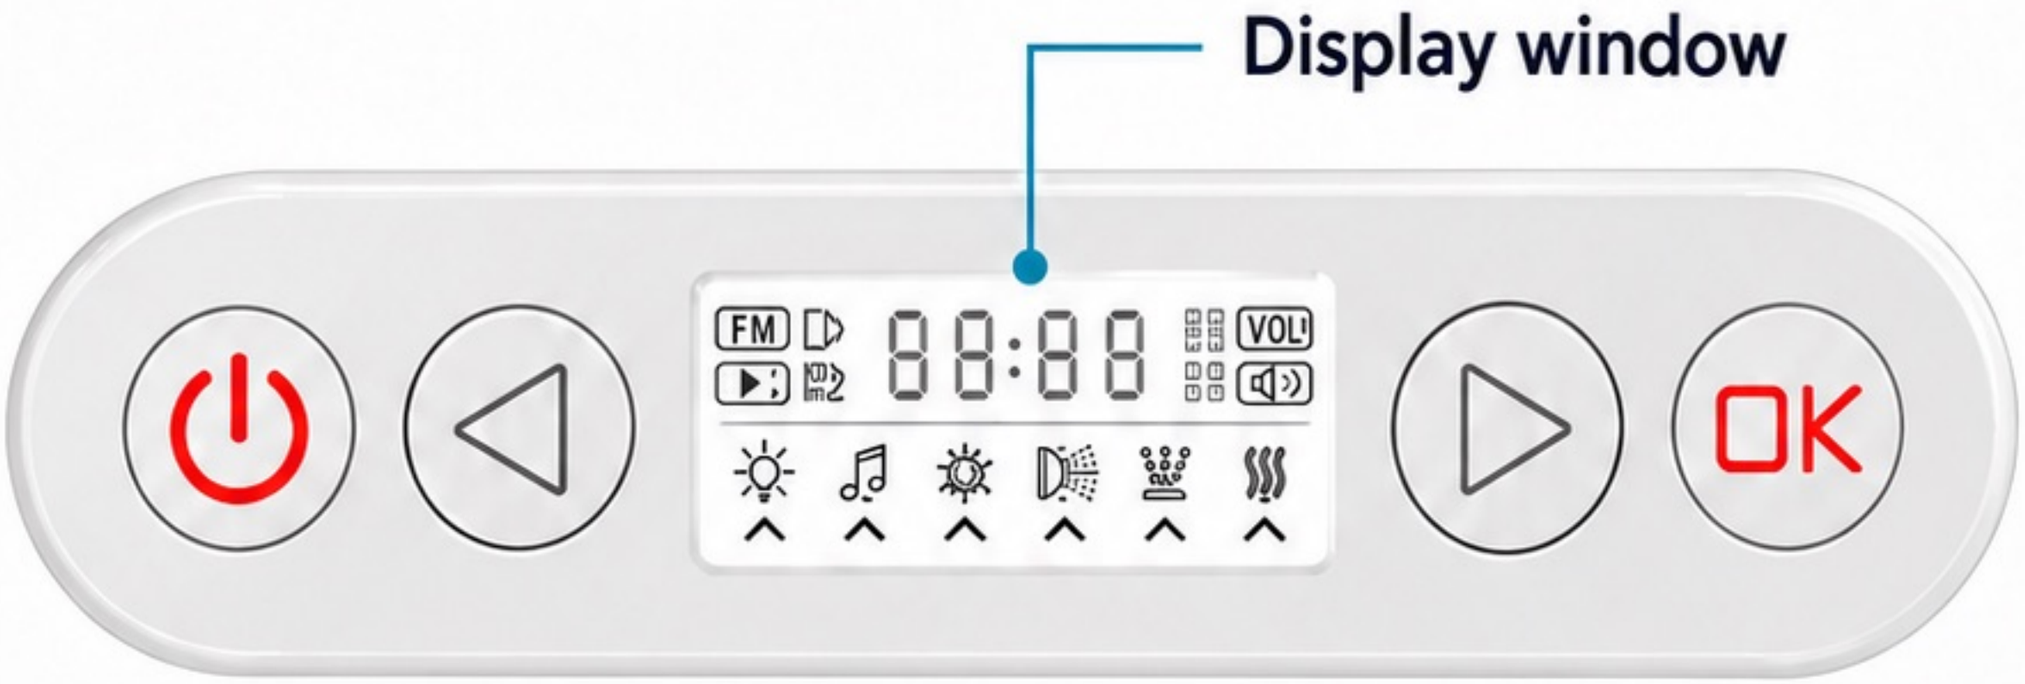

On / Off / Function

Left / Down

Right / High

Select

Light

Audio

Cleaning

Whirlpool jets

Therapeutic jets

Heater

5 Waterfall (optional)

If your jacuzzi bathtub is equipped with a waterfall, the waterfall is on the same circuit as the whirlpool jets and will start at the same time. You can adjust the flow rate by turning the adjustment lever on the side of the bathtub.

6 Sound system (optional)

When the screen is on, press the directional buttons until you see the musical note icon.
Press the “OK” button, the radio will turn on. Repeat the operation to turn it off.
When the radio is on, use the directional buttons to change the FM radio frequency.
Press the function button once to tune and find preset radio frequencies.
Press the function button a second time to display the “VOL” and adjust the radio volume using the directional buttons.
Press the function button a third time to enable the Bluetooth connection. The Bluetooth system should be displayed in the device list under the name “SD_BT”.

7 Lock

The system will lock automatically if it is not used for 1 minute. In this case, press the “OK” button for 2 seconds.

8 Heater (optional)

When the screen is on, press the directional buttons until you see the heater icon.
Press the “OK” button, the heater will turn on. Repeat the operation to turn it off.

Professional Assistance

If you need to contact us for any inquiries or technical support on your product, you can reach us:

By Email:
info@fontaines.ca

Return Policy

1. You have **30 days after delivery** to look over the tub and confirm that it fits your needs.

2. As long as it's **unused, uninstalled, and in its original packaging**, you can return it.

3. **Before** sending anything back, we'll provide an RMA number and instructions.