Bouticcelli

Installations Instructions

Bathtub

The electrical installation must be carried out by a qualified electrician. All work must comply with the national and local electrical standards in force at the time of installation.

Provide an independent power supply, single-phase, grounded (110–120 V, 50–60 Hz) protected by an appropriate GFCI (Ground-Fault Circuit Interrupter) or equivalent fuse.

This protection device must be dedicated exclusively to the bathtub. It is recommended to use a residual current device (RCD) or differential circuit breaker with a sensitivity of up to 20 mA.



It is recommended to install a bathroom exhaust fan (steam evacuation device) in your bathroom. The walls and floor must be finished, tiled, and level before installing the bathtub. The skirt is removable and allows access to the components. All bathtubs are factory-tested before shipping.

Accessible shut-off valves should be installed on the water supplies to your bathtub so that the water can be shut off in the event of a prolonged absence or maintenance.

1. SITE PREPARATION

Before installation, ensure that:

- ☐ The floor is finished (ceramic or other final flooring surface).
- ☐ The floor is structurally sound and perfectly level.
- ☐ The space matches the model dimensions.

Required drain: Standard 1 1/2”

Ensure plumbing and electrical connections are positioned according to the pre-installation dimensions:

- ☐ 1 1/2” drain is properly positioned.
- ☐ 1/2” female water outlet is properly positioned.
- ☐ 110–120 V GFCI-protected electrical outlet must be properly positioned.

2. POSITIONING

- ☐ Place the bathtub in position without making any plumbing connections.
- ☐ Check the visual alignment.
- ☐ Verify that the bathtub is level using an appropriate tool.
- ☐ Adjust the feet if necessary.

> **Note:** The bathtub must be perfectly stable with no movement.

3. ELECTRICAL INSTALLATION

- ☐ Connect the power cord attached to the control box to the electrical supply.
- ☐ Check that the system is working by pressing the power button on the controller.

4. PLUMBING INSTALLATION

- ☐ Connect the 1 1/2" drain according to local plumbing codes.
- ☐ Connect the pre-installed 1/2" male flexible hose to the 1/2" female water outlet.
- ☐ Tighten firmly without over-tightening.

5. WATER TIGHTNESS TEST

- ☐ Wait 24 hours after the plumbing installation.
- ☐ Fill the bathtub completely.
- ☐ Let it sit filled with water for 15 to 20 minutes.
- ☐ Check for any leaks underneath the bathtub.
- ☐ Verify proper and complete drainage.


6. FINAL INSTALLATION

- ☐ Place the bathtub in its final position.
- ☐ Apply a silicone sealant at the base.

Faucet sets


1 Faucet set with 2 components

Mixer A allows you to adjust the water temperature by turning it left and right. The water flow is adjusted by lifting the tap handle.
Diverter B allows you to divert the water flow to the following two positions: fill spout and shower head.

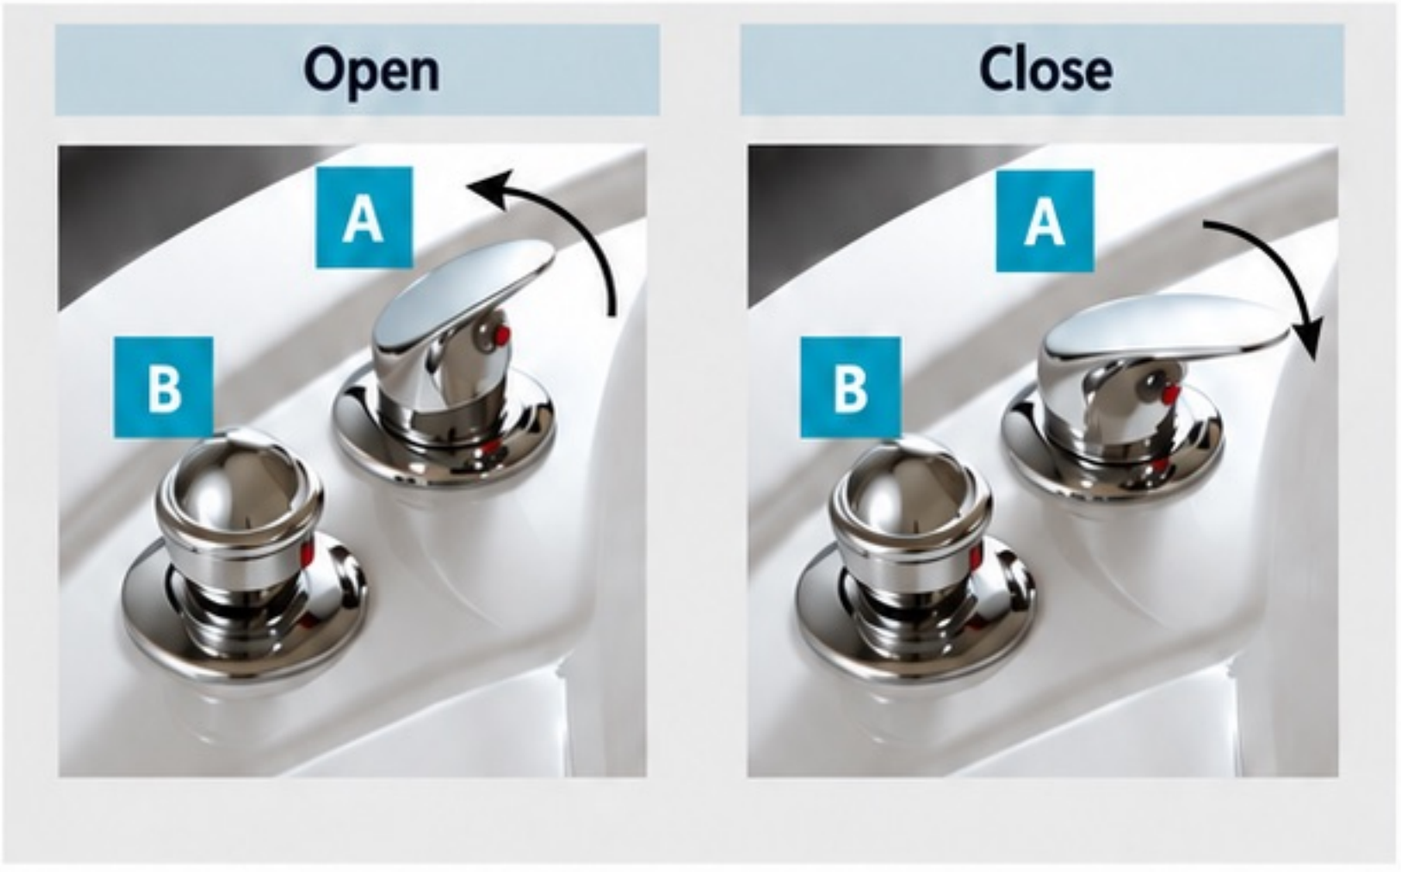


A Hot and cold water mixer

B Diverter

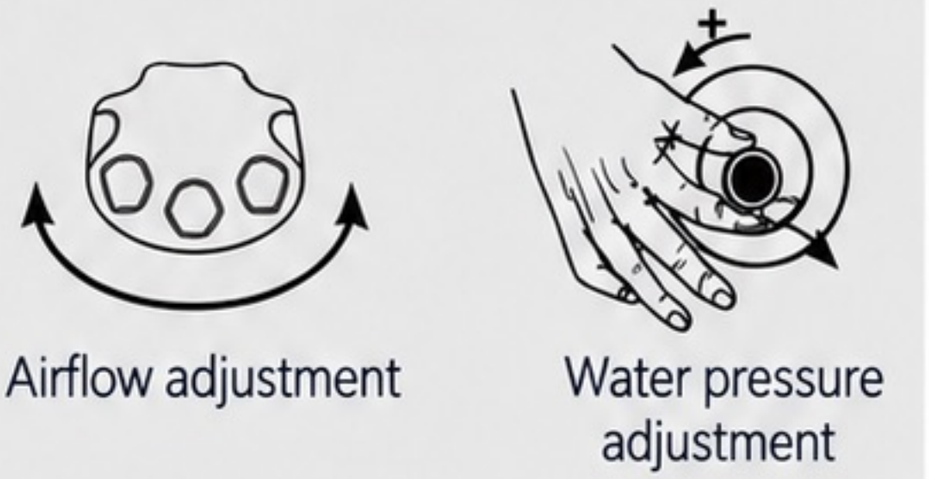

2 Faucet set with 3 components

Mixer A controls the hot water flow.
Mixer C controls the cold water flow.
Diverter B directs the water flow to the following three positions: fill spout, shower head, and rinse function.

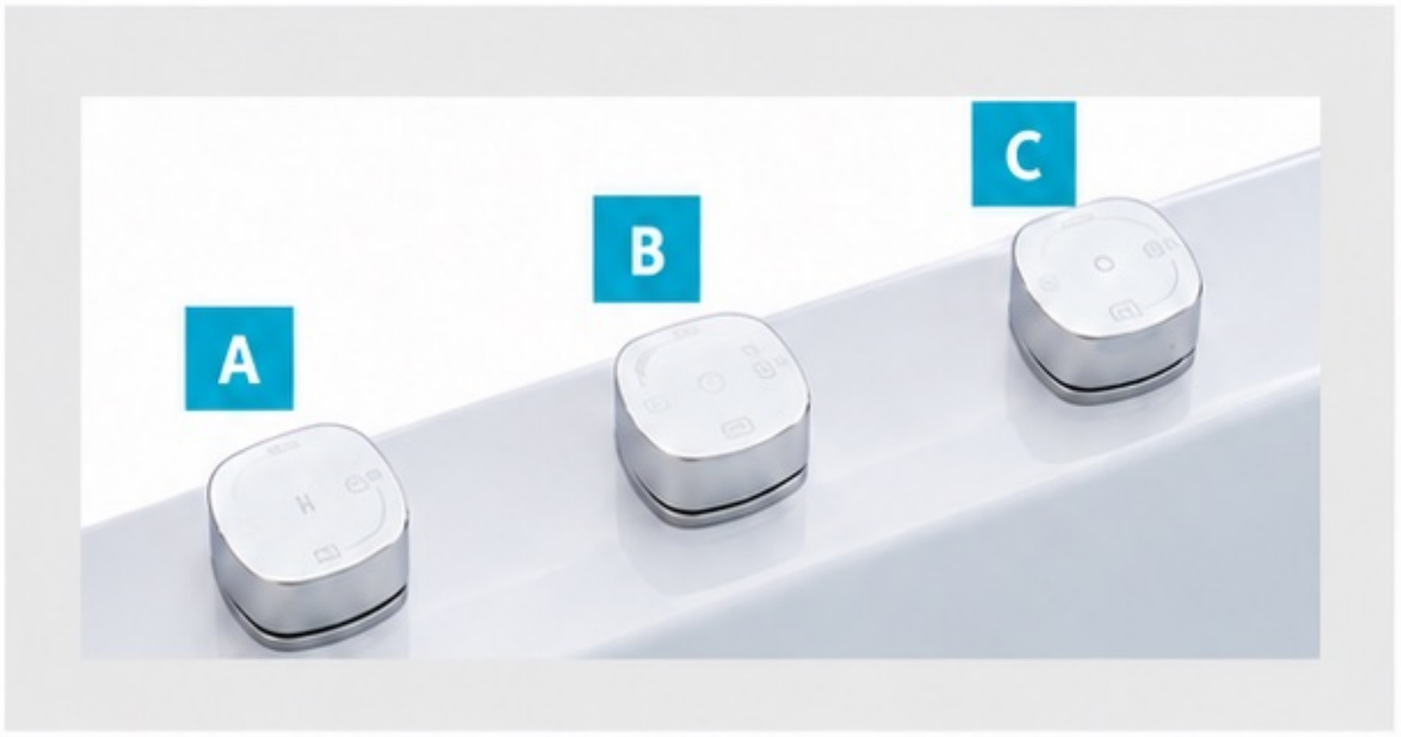

A Hot water mixer

B Diverter


C Cold water mixer

Controller Instructions



DXD-A027/A

Control Panel

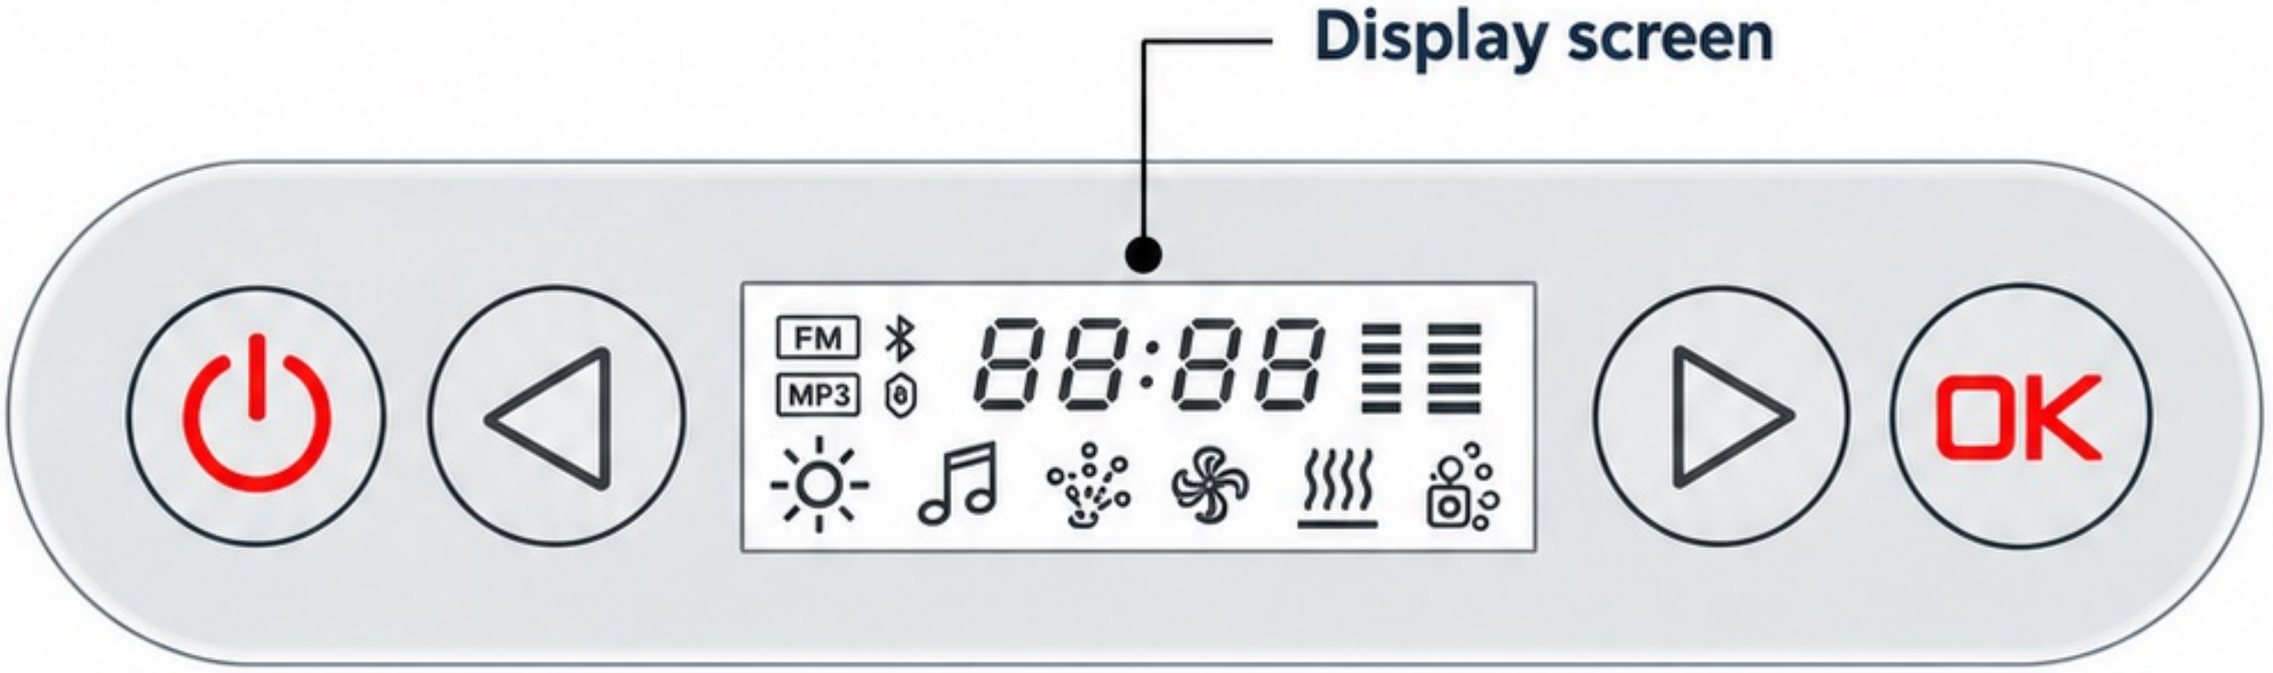

Power On / Off
Turn on / Turn off
the control panel

Left
Navigate through
the options

Right
Navigate through
the options

Select
Confirm the selection

Lighting
Turn on / Turn off
the light

Audio
Turn on / Turn off
the radio or music (FM/MP3)

Cleaning
Turn on / Turn off
the cleaning function (ozonator)

Air Blower
Turn on / Turn off
the air blower jets

Therapeutic Jets
Turn on / Turn off
the water jets (whirlpool)

Heater
Turn on / Turn off
the heater

Operating Instructions

1 Power On / Off

Press and hold the power button for 2 seconds to turn on the unit.
When the unit is on, press and hold the power button again for 2 seconds to turn it off.

2 Lighting Function

When the display is on, use the directional buttons to navigate to the light icon.
Press the “OK” button to turn on the light.
Repeat the same procedure to turn it off.

3 Cleaning Function (Optional)

When the display is on, use the directional buttons to navigate to the ozonator icon.
Press the “OK” button to activate the ozonator.
Repeat the same procedure to turn it off.

4 Therapeutic Jets

When the display is on, use the directional buttons to navigate to the air blower icon.
Press the “OK” button to activate the air blower.
Repeat the same procedure to turn it off.

5 Massage Jets (Whirlpool)

When the display is on, use the directional buttons to navigate to the water jets icon.
Press the “OK” button to activate the water pump.
Repeat the same procedure to turn it off.



IMPORTANT: Always ensure that the bathtub is filled with enough water before activating the massage jets (Whirlpool) function.

6 Audio Function (Optional)

When the display is on, use the directional buttons to navigate to the music note icon.
Press the “OK” button: the radio will turn on. Repeat the same procedure to turn it off.
When the radio is on, use the directional buttons to change the FM frequency.
Press the function button once to activate the TUN mode and search for preset radio stations.
Press the function button a second time to display the volume and adjust it using the directional buttons.
Press the function button a third time to activate Bluetooth mode.
The Bluetooth system will appear in the list of devices under the name “SD_BT”.

7 Lock Function

The system automatically locks if it is not used for 1 minute.
To unlock it, press and hold the “OK” button for 2 seconds.

8 Water Heater (Optional)

When the display is on, use the directional buttons to navigate to the water heater (heater) icon.
Press the “OK” button: the water heater will turn on.
Repeat the same procedure to turn it off.

9 Waterfall (Optional)

If your whirlpool bathtub is equipped with a waterfall, it is supplied by the same circuit as the massage jets and turns on at the same time.
You can adjust the waterfall flow using the lever located on the side of the bathtub.

Technical Support

If you have any questions or need technical support regarding your product, you can contact us by email at:

info@bouticcelli.com

Our team will be happy to assist you.

Return Policy

You have 30 days from the date of delivery to inspect the bathtub and confirm that it meets your needs.

To be eligible for a return, the bathtub must be unused, not installed, and in its original packaging.

Before any return, we will provide you with a Return Merchandise Authorization (RMA) number as well as the required instructions.

Thank you for choosing a Bouticcelli product. Feel free to contact us for any additional information about our bathtubs.